

 


Product Installation Instructions


Part Number: 69300H-A; 69300H-B; 69300H-W

CAUTION: TURN OFF ALL POWER AT THE SOURCE TO AVOID INJURY
Installation Instructions:

1. Drill hole in mounting surface with 3/4" hole saw or spade drill bit
2. Push wires through mounting hole and the threaded collar and wire cap.
3. Attach wires to power source - red is positive & black is neutral. LED's are polarity sensitive. If the wires are not connected correctly, the LED will fail to light.
4. Thread the collar on the threaded shaft until tight. Tightening this collar keeps the light from spinning.
5. Thread the wire cap onto the back of the threaded shaft until tight. This holds the LED in place.

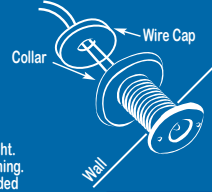

TO CHANGE THE DIRECTION OF THE LED - (See Fig. A & B):
The light is shipped with the LED in the straight position. The LED board can be angled so the light shines at 15° from straight. To change the angle, remove the rubber gasket and slide the board & tray out of housing. Remove the board from the tray and flip it over, pushing the opposite side into the slot in the tray. Replace the gasket and push light assembly back into the threaded housing (the tray will only slide into the housing one way)

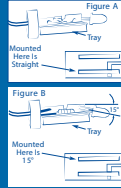

Wattage	Voltage	Amp Draw
0.48 Watt	12 Volt	0.04 Amps

 


Product Installation Instructions


Part Number: 69300H-A; 69300H-B; 69300H-W

CAUTION: TURN OFF ALL POWER AT THE SOURCE TO AVOID INJURY
Installation Instructions:

1. Drill hole in mounting surface with 3/4" hole saw or spade drill bit
2. Push wires through mounting hole and the threaded collar and wire cap.
3. Attach wires to power source - red is positive & black is neutral. LED's are polarity sensitive. If the wires are not connected correctly, the LED will fail to light.
4. Thread the collar on the threaded shaft until tight. Tightening this collar keeps the light from spinning.
5. Thread the wire cap onto the back of the threaded shaft until tight. This holds the LED in place.

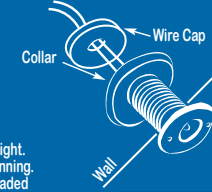

TO CHANGE THE DIRECTION OF THE LED - (See Fig. A & B):
The light is shipped with the LED in the straight position. The LED board can be angled so the light shines at 15° from straight. To change the angle, remove the rubber gasket and slide the board & tray out of housing. Remove the board from the tray and flip it over, pushing the opposite side into the slot in the tray. Replace the gasket and push light assembly back into the threaded housing (the tray will only slide into the housing one way)

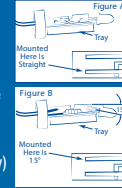 

Wattage	Voltage	Amp Draw
0.48 Watt	12 Volt	0.04 Amps

 


Product Installation Instructions


Part Number: 69300H-A; 69300H-B; 69300H-W

CAUTION: TURN OFF ALL POWER AT THE SOURCE TO AVOID INJURY
Installation Instructions:

1. Drill hole in mounting surface with 3/4" hole saw or spade drill bit
2. Push wires through mounting hole and the threaded collar and wire cap.
3. Attach wires to power source - red is positive & black is neutral. LED's are polarity sensitive. If the wires are not connected correctly, the LED will fail to light.
4. Thread the collar on the threaded shaft until tight. Tightening this collar keeps the light from spinning.
5. Thread the wire cap onto the back of the threaded shaft until tight. This holds the LED in place.

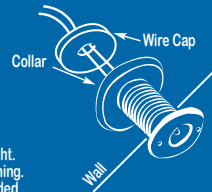

TO CHANGE THE DIRECTION OF THE LED - (See Fig. A & B):
The light is shipped with the LED in the straight position. The LED board can be angled so the light shines at 15° from straight. To change the angle, remove the rubber gasket and slide the board & tray out of housing. Remove the board from the tray and flip it over, pushing the opposite side into the slot in the tray. Replace the gasket and push light assembly back into the threaded housing (the tray will only slide into the housing one way)

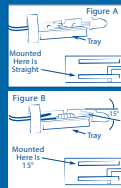 

Wattage	Voltage	Amp Draw
0.48 Watt	12 Volt	0.04 Amps

 


Product Installation Instructions


Part Number: 69300H-A; 69300H-B; 69300H-W

CAUTION: TURN OFF ALL POWER AT THE SOURCE TO AVOID INJURY
Installation Instructions:

1. Drill hole in mounting surface with 3/4" hole saw or spade drill bit
2. Push wires through mounting hole and the threaded collar and wire cap.
3. Attach wires to power source - red is positive & black is neutral. LED's are polarity sensitive. If the wires are not connected correctly, the LED will fail to light.
4. Thread the collar on the threaded shaft until tight. Tightening this collar keeps the light from spinning.
5. Thread the wire cap onto the back of the threaded shaft until tight. This holds the LED in place.

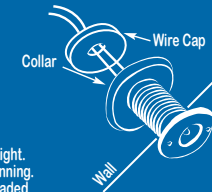

TO CHANGE THE DIRECTION OF THE LED - (See Fig. A & B):
The light is shipped with the LED in the straight position. The LED board can be angled so the light shines at 15° from straight. To change the angle, remove the rubber gasket and slide the board & tray out of housing. Remove the board from the tray and flip it over, pushing the opposite side into the slot in the tray. Replace the gasket and push light assembly back into the threaded housing (the tray will only slide into the housing one way)

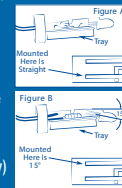 

Wattage	Voltage	Amp Draw
0.48 Watt	12 Volt	0.04 Amps