

 





LED Radiance Light Installation Instructions

(Part #'s: Part #'s 69231B & 69240)


PARTS NEEDED:			
			
Radiance Overhead Light	Wire Nuts (not provided)	Power Drill w/ Hole Saw Bit	Mounting Screws (not provided)

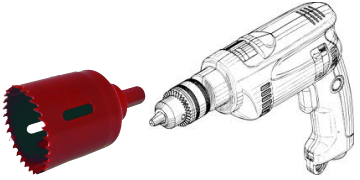Safety Instructions


- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Light is rated for interior installation only, do not install in wet locations.
- Operating Voltage: 10 - 14V DC
- Do not install any luminaire assembly closer than 6" from any curtain or other combustible material.

1. Determine where your LED light fixture will be installed. Once determined, drill a hole using a hole saw (see chart below for hole size requirement).

Mounting Method	Cutout
69231B (81229)	2.25"
69240 (81232)	3.5"
69926	2.5"

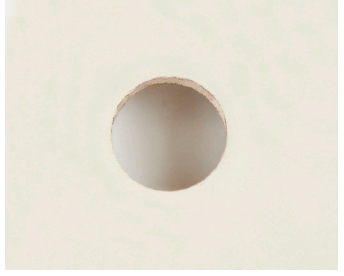 

 2. Use the wiring diagram below to wire the light to the units power.

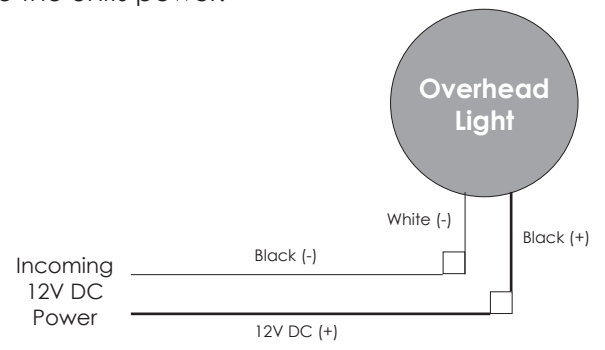

3. *Installing the spring clip version:*
Push clips on both sides of light up and slide housing and clips through hole. Clips will snap down and hold the light in place.



4. *Installing the screw mount version:*
Remove cover by twisting counter clockwise. Mark location of screw holes and pre-drill. Screw in fixture and re-install cover by twisting clockwise.





LED Radiance Light Installation Instructions

(Part #'s: Part #'s 69231B & 69240)

5. *Installing the leaf spring version:
Push light in at an angle and press down on
opposite side until light is firmly seated in hole.*

