

 
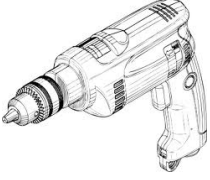




# Radiance™ Surface Mount Light Installation Instructions

(Part #'s: 69253, 69353 and 69453)

## PARTS NEEDED:

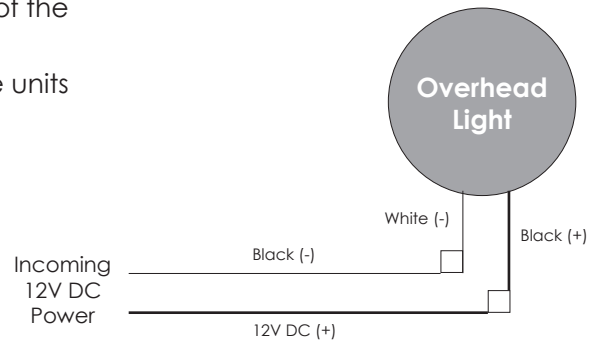
			
Radiance Overhead Light	#8 Mounting Screws (not provided)	Butt Splice Connectors (not provided)	Power Drill

## Safety Instructions

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Light is rated for interior installation only, do not install in wet locations.
- Operating Voltage: 10 - 14V DC

1. Determine the installation location and mark the location of the screw holes. Drill a hole and pull the units wiring through.

Using the wiring diagram at the right to wire the light to the units power.



2. Feed the wires back through the hole and screw the light in using #8 screws (not provided).

Install the lens and test the light.



For warranty information please visit [www.itc-us.com](http://www.itc-us.com)

3030 Corporate Grove Dr • Hudsonville • MI • 49426

Phone: 616-396-1355 • [www.itc-us.com](http://www.itc-us.com) • [sales@itc-us.com](mailto:sales@itc-us.com) • DOC #:710-00071 Rev A • 05/15/18